


# BASEMENT WINDOW SYSTEMS Safety Section


To download instructions for later viewing, go to the File Menu, then Save As... and save to desired location.

## Welcome to the Safety Section

To meet IRC 2000 Egress Code, attach ladder to well with sheet metal screws using pre-drilled holes on ladder.

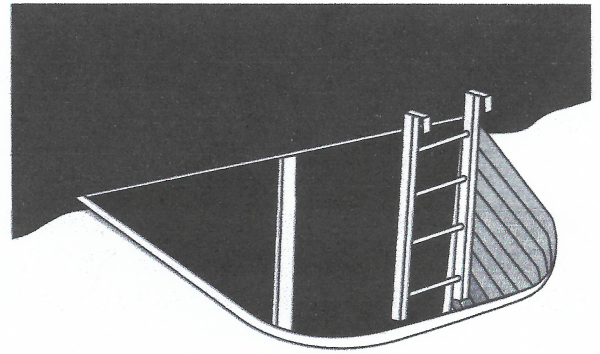

Prevent accidental fall-ins with Boman Kemp safety grates and clear lexan covers. Safety grates and covers prevent children, animals, debris, and water from entering area well.

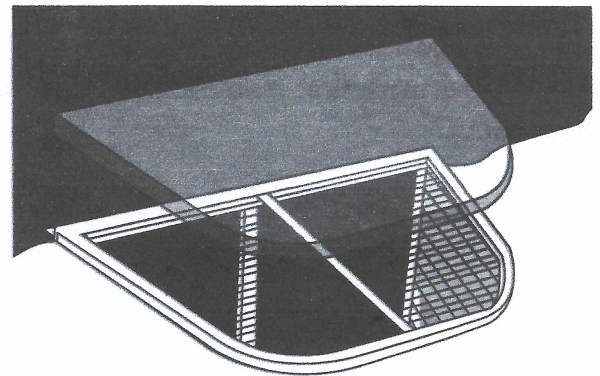

## Clear Cover

(Always Use Job Specific Personal Protective Equipment)

### A. Tool List (Suggested)

1. Plastic scraper
2. Hand brush
3. Nylon scrub brush

### B. Material List

1. Windex™ or equivalent window cleaner
2. Paper towels

### C. Installation Procedure

1. Clean top of safety grate. Scrape and brush off mud and jobsite accumulation.
2. Clear cover has a thin, clear protective film laminated to outside surface. This must be peeled off the cover completely.
3. Place clear cover over safety grate, ensuring back, raised lip is pulled tight against raised angle of safety grate, and sides are symmetrical. Mark locations for Velcro™ attachments on top surface of safety grate.
4. Remove clear cover.
5. Using glass cleaner and nylon brush, thoroughly clean areas on top surface of safety grate previously marked for Velcro™ attachments. Surface dry after cleaning.
6. Check that cleaned areas are completely dry before proceeding.
7. Peel off each Velcro™ strip adhesive covering from underneath clear cover.
8. Again, place clear cover over safety grate, ensuring back, raised lip is pulled tight against raised angle of safety grate, and sides are symmetrical.
9. Apply hand pressure over both Velcro™ strips to ensure an adequate bond, and leave in place a minimum of 5 minutes before removing clear cover from safety grate.